



SEQENCER

BLOCK DIAGRAM

Remarks:

ANT relay during RX always switch to hot position
 LNA connected with +14V only during RXing
 If something happen, always trnsmiting to the antenna

TITLE: block	
Document Number:	REV:
Date: 05.01.2008 22:31:51	Sheet: 1/1