

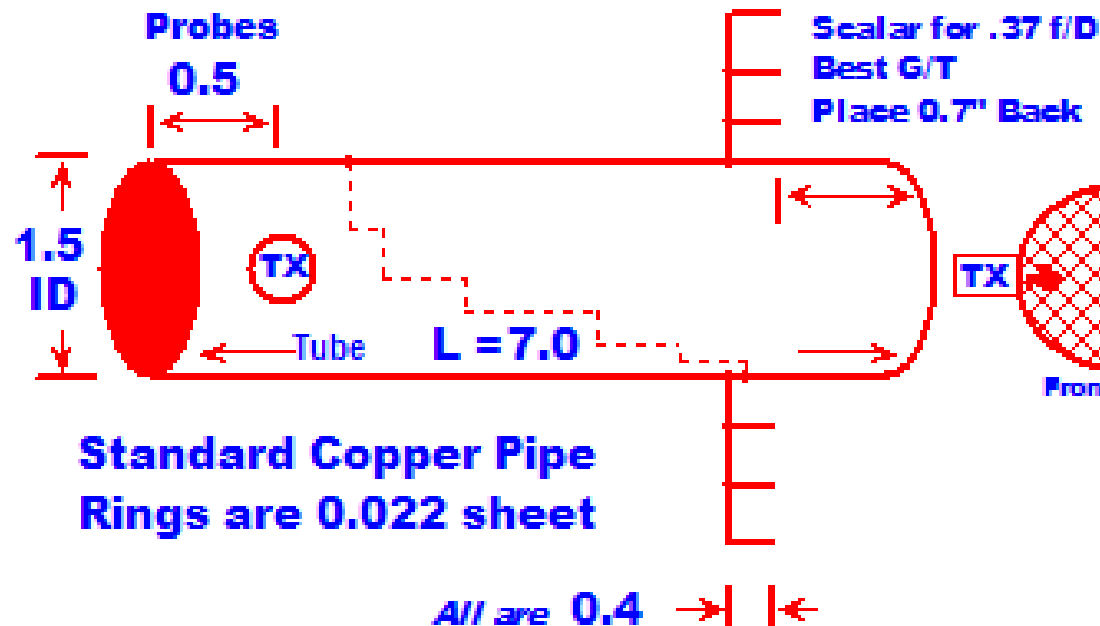


# WD5AGO 5760 MHz CP Feed for f/D of 0.35 to 0.40

5 Step Septum

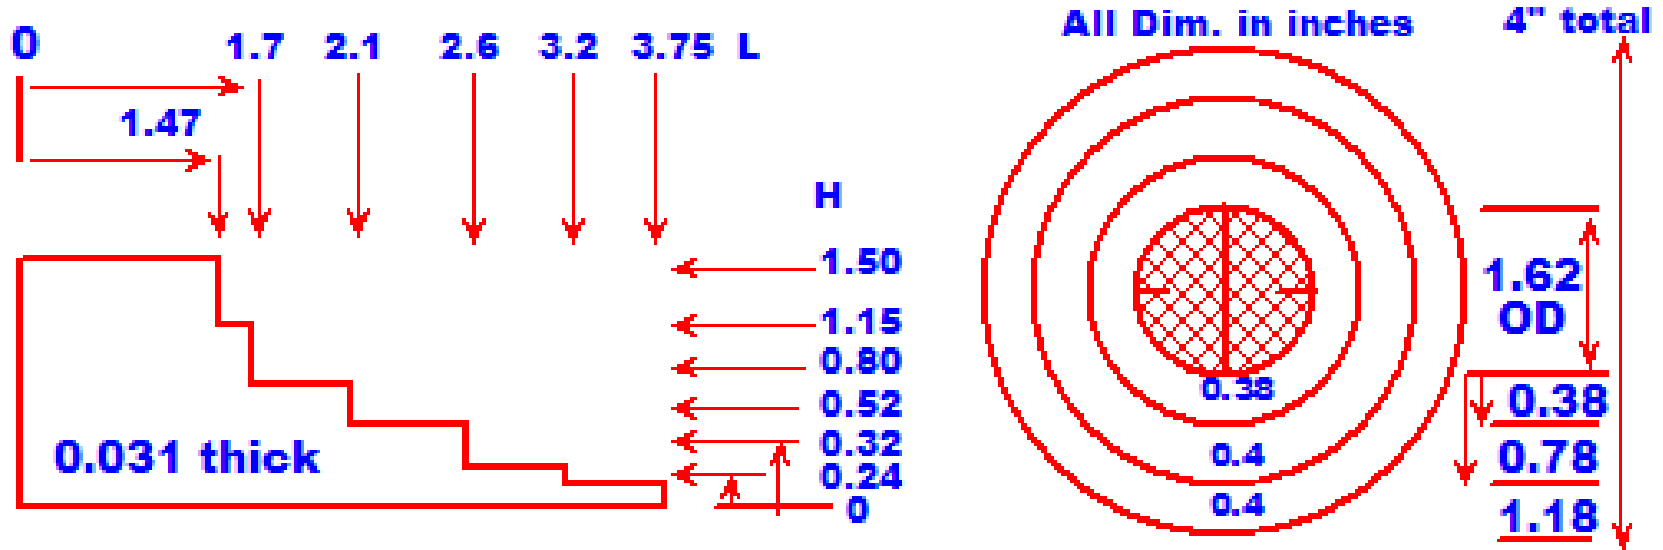

Probes: Start with 0.05" center pin. Using 5/32" solid rod, drill center hole sand and form as noted. Slide and solder to connectors center pin.

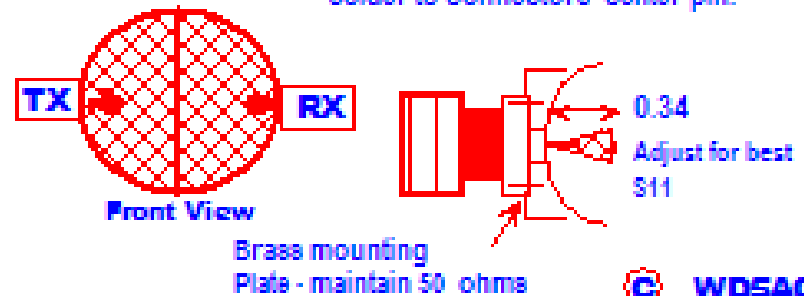

<b>Thomas Henderson WDSAGO</b>	
Title: 5760 CP 50 FEED.PIC	
Rev A	Rev B
Date: Wed, May 10, 2010	Sheet: 1 of 1